



DEZURIK FSDI FLOORSTAND WITH POSITION INDICATOR USED WITH MANUAL GEAR ACTUATORS

Instruction **D10016**
December 2012

Instructions

These instructions are for use by personnel who are responsible for the installation, operation and maintenance of DeZURIK valves, actuators or accessories.

Safety Messages

All safety messages in the instructions are identified by a general warning sign and the signal word CAUTION, WARNING or DANGER. These messages indicate procedures to avoid injury or death.

Safety label(s) on the product indicate hazards that can cause injury or death. If a safety label becomes difficult to see or read, or if a label has been removed, please contact DeZURIK for replacement label(s).

⚠WARNING

Personnel involved in the installation or maintenance of valves should be constantly alert to potential emission of pipeline material and take appropriate safety precautions. Always wear suitable protection when dealing with hazardous pipeline materials. Handle valves which have been removed from service with suitable protection for any potential pipeline material in the valve.

Inspection

Your DeZURIK product has been packaged to provide protection during shipment; however, items can be damaged in transport. Carefully inspect the unit for damage upon arrival and file a claim with the carrier if damage is apparent.

Parts

Replaceable wear parts are listed on the assembly drawing. These parts can be stocked to minimize downtime. Order parts from your local DeZURIK sales representative or directly from DeZURIK. When ordering parts please provide the following information:

If the valve has a data plate: please include the 7-digit part number with either 4-digit revision number (example: 9999999R000) or 8-digit serial number (example: S1900001) whichever is applicable. The data plate will be attached to the valve assembly. Also, include the part name, the assembly drawing number, the balloon number and the quantity stated on the assembly drawing.

If there isn't any data plate visible on the valve: please include valve model number, part name, and item number from the assembly drawing. You may contact your local DeZURIK Representative to help you identify your valve.

DeZURIK Service

DeZURIK service personnel are available to maintain and repair all DeZURIK products. DeZURIK also offers customized training programs and consultation services. For more information, contact your local DeZURIK sales representative or visit our website at DeZURIK.com.

**FSDI Floorstand with Position Indicator
used with Manual Gear Actuators**

Table of Contents

Description - - - - -	4
Lubrication - - - - -	4
Tools Required - - - - -	4
Installation	
(<i>LA-Series, T-Series, MG-Series, Mastergear & Rotork</i>) Actuators - - - - -	4
(<i>G-Series</i>) Actuators - - - - -	5
Pointer Adjustment - - - - -	5
Field Mounting ACC* <i>SJ</i> (Slip Joint) Option - - - - -	5

DeZURIK

FSDI Floorstand with Position Indicator used with Manual Gear Actuators

Description

The FSDI Floorstand with Position Indicator can be used with most DeZURIK and purchased rotary actuators. The handwheel is mounted on a floorstand and is extended from the valve/actuator assembly to allow remote operation of hard-to-reach valves. This model has a highly visible position indicator.

Lubrication

The floorstand has been lubricated at the factory and requires no additional lubrication. If disassembled, lubricate the gears using one of these lubricants:

- Keystone Zeniplex-1 (**recommended**)
- Amoco Amolith Grease #1-EP (alternate)
- Amsoil GHD (alternate)
- Mobil Mobilux EP 1 (alternate)
- Petro-Canada Vultrex MPG EP 1 (alternate)
- Shell Alvania EP 1 (alternate)
- Texaco Multifak EP 1 (alternate)

For lubrication requirements of the valve or actuator, see the LUBRICATION sections in the Valve Instructions and the Actuator Instructions.

Tools Required

The floorstand is assembled using SAE fasteners. To service this unit you will need combination wrenches, Allen wrenches, a pin punch and a dead blow hammer.

Installation

The installation procedure depends upon which type of actuator is used.

(LA-Series, T-Series, MG-Series, Mastergear & Rotork) Actuators

When connecting the floorstand to these actuators, it is very important that the floorstand output shaft be directly above (or below) the actuator input shaft. Use a plumb bob to align the floorstand and actuator.

1. Calculate the length of pipe required, and cut the pipe furnished with the floorstand to this length.
2. Slide a coupling into the end of the extension pipe.
3. Drill a 1/4-inch-diameter hole through the pipe and coupling, then drive a 1/4-inch-diameter pin into the hole.
4. Repeat steps 2 and 3 to fasten a coupling to the other end of the pipe.
5. **For LA-Series, MG-Series, Mastergear & Rotork actuators:** Pin the coupling to the shaft. The holes have already been drilled.

For T-Series actuators: Install a key in the actuator input shaft; then set the keyed coupling on the shaft so the key engages the keyway in the coupling.

6. While holding the extension pipe straight up, lower the floorstand onto the pipe so the floorstand output shaft slides into the coupling and fasten the floorstand to the floor.
7. Drill a 1/4-inch-diameter hole through the floorstand output shaft using the holes in the coupling as guides.
8. Drive a 1/4-inch-diameter pin into the shaft to secure the coupling to the floorstand output shaft.
9. Adjust the pointer as described in the POINTER ADJUSTMENT section of these instructions.

FSDI Floorstand with Position Indicator used with Manual Gear Actuators

Installation (Continued)

(G-Series) Actuators

1. After the valve and floorstand have been mounted in place, connect them with a piece of 7/8-inch-diameter bar stock cut to the correct length.
2. With the 7/8-inch bar stock slid into the universal couplings, drill 1/4-inch-diameter holes through the bar stock and couplings. Use the hole in the side of the coupling as a guide.
3. Drive a 1/4-inch-diameter pin into each of the holes to connect the bar stock and couplings.
4. Adjust the pointer as describe in the POINTER ADJUSTMENT section of these instructions.

Pointer Adjustment

1. Using the handwheel, close the valve.
2. Loosen the pointer set screw until the pointer turns freely.
3. Turn the pointer until it points to the word "SHUT", then tighten the setscrew.
4. Open the valve to check pointer alignment. If the OPEN position is more important in your application, it may be necessary to loosen the set screw and turn the pointer until it points to the word "OPEN." Tighten the setscrew.

Field Mounting ACC*SJ (Slip Joint) Option

Use the following procedure for mounting the ACC*SJ (Slip Joint) option to an existing FSDIR Floorstand (See Figure 1 for parts identification):

If the existing FSDIR Floorstand is attached to the valve in a pipeline, the floorstand will need to be removed from the extension. Before disassembly, close the valve, relieve the pressure and stop the flow in the pipeline.



WARNING!

Relieve the pressure and stop the flow in the pipeline. Pressure and/or flow with the extension or actuator removed can cause the valve to slam closed, and can cause water hammer damage to the valve and other pipeline equipment.

1. Set the floorstand assembly to the closed position.
2. Remove pointer (G11):

For floorstand without secondary gear box:

- a. Remove the set screw (G12) from the pointer (G11) and slide the pointer off the pointer shaft (G16).

For floorstand with secondary gear box:

- a. Remove the set screw (G12) from the pointer (G11) and slide the pointer off the pointer shaft (G16).
- b. Remove the screws (G40) and cover (G39) from the gear housing fab (G43).

**FSDI Floorstand with Position Indicator
used with Manual Gear Actuators**

Field Mounting ACC*SJ (Slip Joint) Option *(Continued)*

- c. Loosen set screws (G17) in both collars (G44) and slide the shaft (G29) and spur gear (G42) towards the dial (G10).
 - d. Drive the pin (G45) out of the worm gear (G41) and shaft (G16).
 - e. Remove the two nuts (G38) from the studs (G37) and slide the gear housing fab (G43) off the studs and extended shaft (G16).
3. Remove the screws (G25) from the housing (G24).
 4. Slide the handwheel, housing and bearing retainer sub-assembly off the floorstand (G3).
 5. Cut off the lower end of the shaft (G22) so the dimension from the bottom of the bearing retainer (G26) to the cut is 21.95".
 6. **.88" & 1.00" diameter extensions** require a bushing (G52) to be pressed into the coupling end of the lower slip joint (G51B) and using a ¼" drill bit, drill thru the bushing using the existing holes in the lower slip joint.
 7. Slide the coupling end of the upper slip joint (G51A) onto the lower end of the shaft (G22), using a ¼" drill bit, drill thru the shaft using the existing holes in the upper slip joint.
 8. Attach the coupling end of the upper slip joint (G51A) to the lower end of the shaft (G22) using pin (G50).
 9. Slide the handwheel, housing and bearing retainer sub-assembly onto the floorstand (G3) and attach the sub-assembly to the floorstand using screws (G25). Tighten the screws to 63 ft lbs for zinc plated bolts and 38 ft lbs for stainless steel.
 10. Replace the pointer (G11):

For floorstand without secondary gear box:

- a. Slide the pointer (G11) onto the pointer shaft (G16) and attach with set screw (G12).

For floorstand with secondary gear box:

- a. Slide the gear housing fab (G43) over the studs (G37) and extended shaft (G16). Slide the worm gear (G41) onto the extended shaft before sliding the gear housing fab completely onto the extended shaft.
 - b. Tighten two nuts (G38) onto the studs (G37) to secure the gear housing fab (G43) to the indicator housing (G24).
 - c. Pin the worm gear (G41) to the shaft (G16) with pin (G45).
 - d. Slide the shaft (G29), spur gear (G42) and collars (G44) so the spur gear is centered on the worm gear (G41) and the collars are against the inside walls of the gear housing fab (G43). Tighten the collar setscrews (G17).
 - e. Apply a heavy coat of grease to the gears.
 - f. Attach the cover (G39) to the gear housing fab (G43) with screws (G40).
 - g. Attach the pointer (G11) to the indicator shaft (G16) with set screw (G12).
11. Attach the coupling end of the lower slip joint (G51B) to the extension using pin (G50).
 12. Slide the floorstand assembly onto the lower slip joint (G51B) and attach the floorstand assembly to the floor.

**FSDI Floorstand with Position Indicator
used with Manual Gear Actuators**

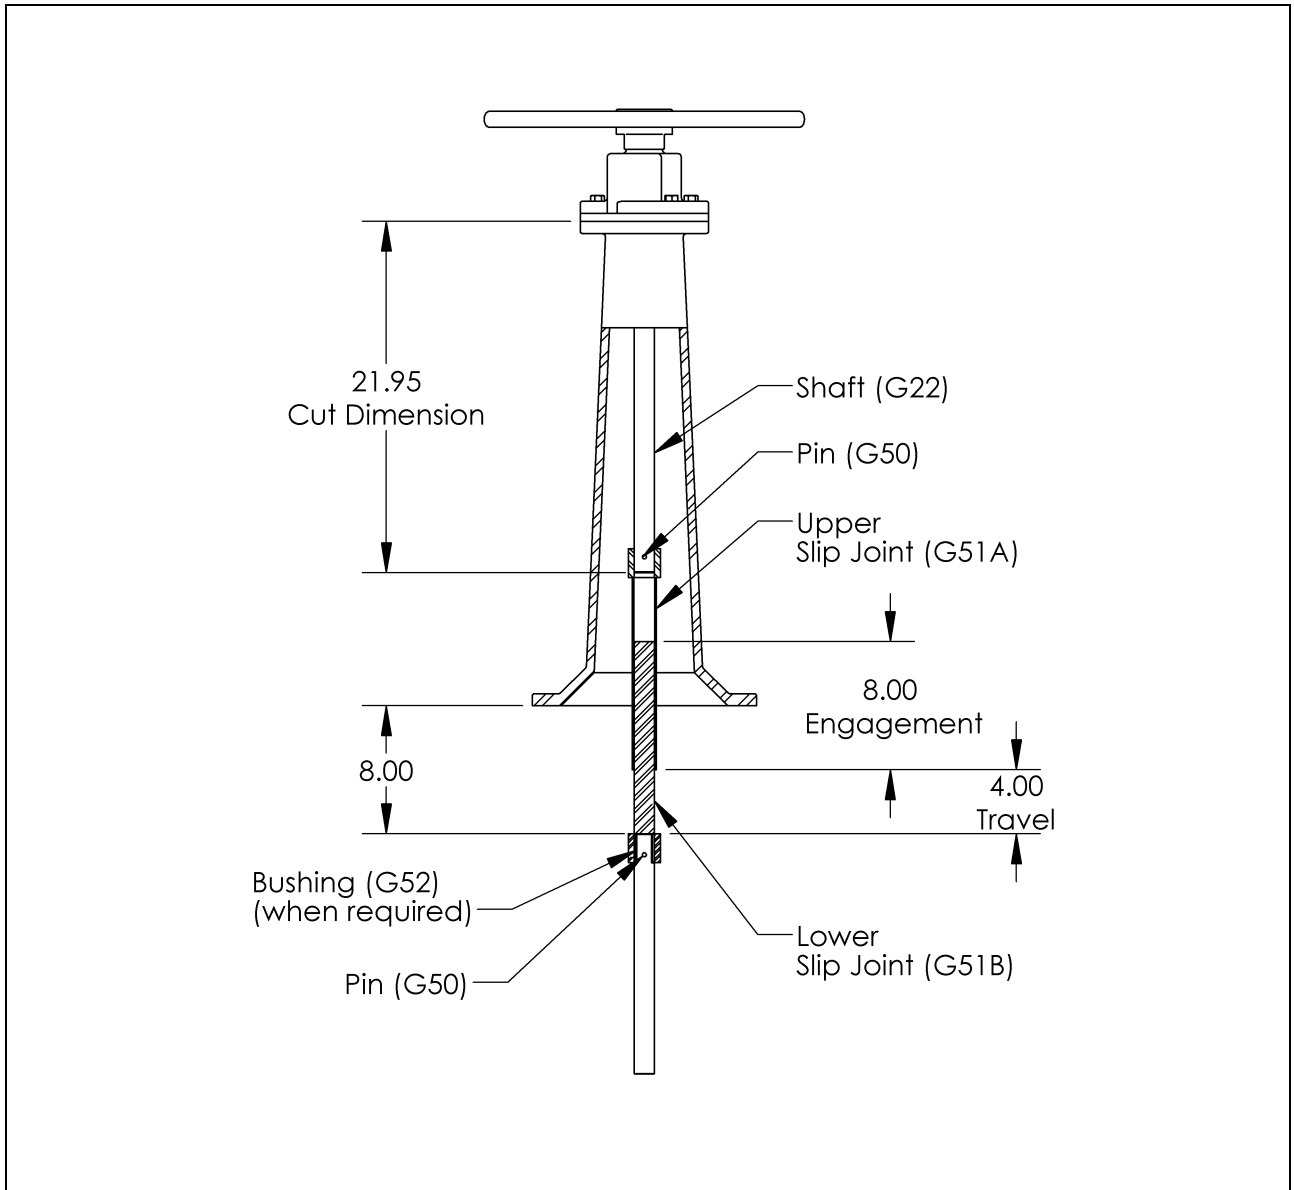


Figure 1 — ACC*SJ Slip Joint Option

Limited Warranty

DeZURIK, Inc. ("Seller") manufactured products, auxiliaries and parts thereof that we manufacture for a period of twenty-four (24) months from date of shipment from Seller's factory, are warranted to the original purchaser only against defective workmanship and material, but only if properly stored, installed, operated, and serviced in accordance with Seller's recommendations and instructions.

For items proven to be defective within the warranty period, your exclusive remedy under this limited warranty is repair or replacement of the defective item, at Seller's option, FCA Incoterms 2020 Seller's facility with removal, transportation, and installation at your cost.

Products or parts manufactured by others but furnished by Seller are not covered by this limited warranty. Seller may provide repair or replacement for other's products or parts only to the extent provided in and honored by the original manufacturer's warranty to Seller, in each case subject to the limitations contained in the original manufacturer's warranty.

No claim for transportation, labor, or special or consequential damages or any other loss, cost or damage is being provided in this limited warranty. You shall be solely responsible for determining suitability for use and in no event shall Seller be liable in this respect.

This limited warranty does not warrant that any Seller product or part is resistant to corrosion, erosion, abrasion or other sources of failure, nor does Seller warrant a minimum length of service.

Your failure to give written notice to us of any alleged defect under this warranty within twenty (20) days of its discovery, or attempts by someone other than Seller or its authorized representatives to remedy the alleged defects therein, or failure to return product or parts for repair or replacement as herein provided, or failure to store, install, or operate said products and parts according to the recommendations and instructions furnished by Seller shall be a waiver by you of all rights under this limited warranty.

This limited warranty is voided by any misuse, modification, abuse or alteration of Seller's product or part, accident, fire, flood or other Act of God, or your failure to pay entire contract price when due.

The foregoing limited warranty shall be null and void if, after shipment from our factory, the item is modified in any way or a component of another manufacturer, such as but not limited to; an actuator is attached to the item by anyone other than a Seller factory authorized service personnel.

All orders accepted shall be deemed accepted subject to this limited warranty, which shall be exclusive of any other or previous warranty, and this shall be the only effective guarantee or warranty binding on Seller, despite anything to the contrary contained in the purchase order or represented by any agent or employee of Seller in writing or otherwise, notwithstanding, including but not limited to implied warranties.

THE FOREGOING REPAIR AND REPLACEMENT LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, OBLIGATIONS AND LIABILITIES, INCLUDING, BUT NOT LIMITED TO, ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR OF MERCHANTABILITY OR OTHERWISE, EXPRESSED OR IMPLIED IN FACT OR BY LAW, AND STATE SELLER'S ENTIRE AND EXCLUSIVE LIABILITY AND YOUR EXCLUSIVE REMEDY FOR ANY CLAIM IN CONNECTION WITH THE SALE AND FURNISHING OF SERVICES, GOODS OR PARTS, THEIR DESIGN, SUITABILITY FOR USE, INSTALLATION OR OPERATIONS. NEITHER ANY PERFORMANCE OR OTHER CONDUCT, NOR ANY ORAL OR WRITTEN INFORMATION, STATEMENT, OR ADVICE PREPARED BY SELLER OR ANY OF OUR EMPLOYEES OR AGENTS WILL CREATE A WARRANTY, OR IN ANY WAY INCREASE THE SCOPE OR DURATION OF THE LIMITED WARRANTY.

Disclaimer

Metric fasteners should not be used with ASME Class 150/300 bolt holes and flange bolt patterns. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, it may lead to product failure, injury, and loss of life. DeZURIK Inc. disclaims all liability associated with the use of metric fasteners with ASME Class 150/300 bolt holes and flange patterns, including but not limited to personal injury, loss of life, loss of product, production time, equipment, property damage, lost profits, consequential damages of any kind and environment damage and/or cleanup. Use of metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns is a misuse that voids all warranties and contractual assurances. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, you do so at your sole risk and any liability associated with such use shall not be the responsibility of DeZURIK, Inc. In addition to the foregoing, DeZURIK's Manufacturer's Conditions apply.

Limitation of Liability

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO; DAMAGE TO OR LOSS OF OTHER PROPERTY OR EQUIPMENT, BUSINESS INTERRUPTION, COST OF SUBSTITUTE PRODUCTS, LOSS OF TIME, LOSS OF PROFITS OR REVENUE, COST OF CAPTIAL, LOSS OF USE, OR DIMINUTION IN VALUE) WHATSOEVER, AND SELLER'S LIABILITY, UNDER NO CIRCUMSTANCES, WILL EXCEED THE CONTRACT PRICE FOR THE GOODS AND/OR SERVICES FOR WHICH LIABILITY IS CLAIMED. ANY ACTION FOR BREACH OF CONTRACT BY YOU, OTHER THAN RIGHTS RESPECTING OUR LIMITED WARRANTY DESCRIBED ABOVE, MUST BE COMMENCED WITHIN 12 MONTHS AFTER THE DATE OF SALE.

Sales and Service

For information about our worldwide locations, approvals, certifications and local representative:

Web site: www.dezurik.com E-Mail: info@dezurik.com



250 Riverside Ave. N., Sartell, MN 56377 • Phone: 320-259-2000 • Fax: 320-259-2227

DeZURIK, Inc. reserves the right to incorporate our latest design and material changes without notice or obligation.

Design features, materials of construction and dimensional data, as described in this manual, are provided for your information only and should not be relied upon unless confirmed in writing by DeZURIK, Inc. Certified drawings are available upon request.